



HP Projector CC 360

Important information about the Netflix feature

- If the pre-installed Netflix cannot be started, please update the Netflix app in the App Store
- If Netflix can be opened but cannot be controlled, please operate Netflix in mouse mode
- Mouse mode can be activated or deactivated at any time by pressing the menu button three times in quick succession.
- The menu button is the button with the three horizontal lines, to the left of the house icon.
- The mouse pointer can be moved using the directional pad. The “OK” button corresponds to the mouse button.

Please note: The App Store and Netflix require an internet connection.